

Analog Remote DRC800 Motorola



Instructions

SEARCHING FOR CODES

Your remote will sample all the codes in its system for that device mode to find one that will allow you to control your device.

1. Press and hold a device mode key (AUDIO, DVD/VCR, or TV) for at least six seconds. The LED for each device key lights up, then the key for the device you selected remains on.
2. Press a function key (such as Power or Mute). The following function keys are valid for Searching (Power is recommended):
 - Power
 - Mute
 - Play
 - CH +
 - Stop

The device key's LED blinks three times, then turns off.

3. Press !. The remote will send the IR command for the function you pressed in Step 2.
4. If the device performed the function you pressed, press OK.
The remote will now control the device you selected in Step 1.
If the device did not perform the function you pressed, repeat step 3.
3. Press " to retry the previous code.

Tip: Note the code set that worked, in case you must re-code your remote:

